


Filter Ball • Full Port • Threaded Connections • 400 WOG with Integrated Strainer

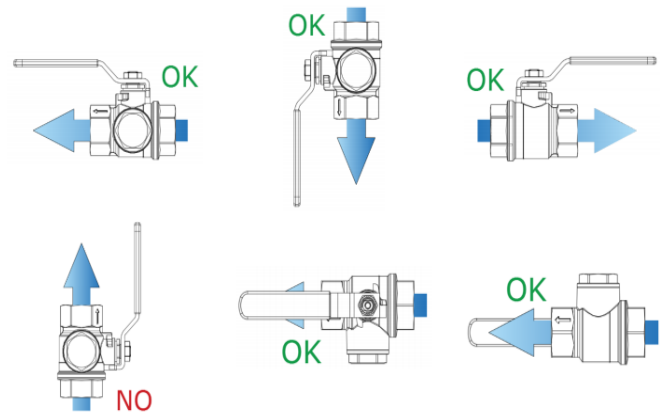

Installation:

1. Locate the flow direction and orient the valve to match the flow direction
2. The Filterball can be installed in any orientation except with the strainer basket is upside down (flow direction vertical)
3. The valve should be oriented so the access port and lever are accessible to service the mesh screen
4. The indications on the handle indicate whether the valve is in an open or closed position.
5. Best practices for threaded valve installations are to be followed for connecting to the piping system.

Operation:

The valve must always be fully open to allow the filter to operate properly. For filter cleaning, close the valve.

Maintenance:

In order to avoid an increasing of pressure losses due to scales, a yearly strainer cleaning is suggested. Please follow the instruction below to carry out the strainer maintenance.

1. Close the valve
2. Unscrew the inspection cap
3. Remove the snap ring
4. Remove the strainer from the valve
5. Clean or change the strainer (replacement strainers can be ordered from Jomar).
6. Insert the strainer and lock it in place with the snap ring
7. Screw and close the cap
8. Open the valve to resume flow

****Installation and Maintenance to be performed by a qualified plumber**



Instructional Video Here:

<https://www.youtube.com/embed/Cr9RYInIs0o>